


1.

Pak radiator og panelradiator ben ud

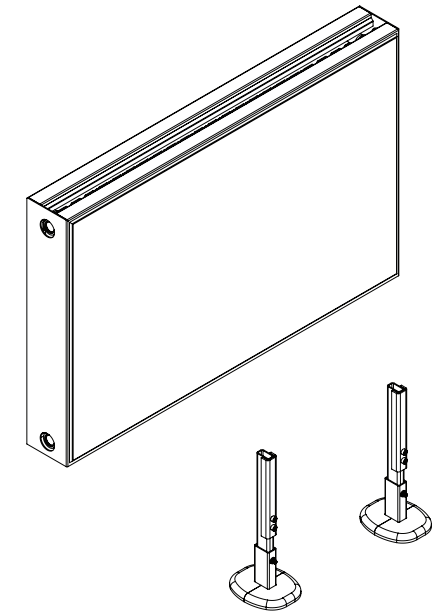


2. Placering af panelradiator ben

NOTE


Panelradiator ben er kun til højde 200-600 mm radiatorer

Panelradiator ben kan ikke anvendes til radiatorer med center an boring (Novello 8, Planar 8, Style 8) samt type 10 og 20 radiatorer.

H	H200-600		
L	A	B	Antal ben
L400	133	-	2
L500	133	-	2
L600	233	-	2
L700	267	-	2
L800	367	-	2
L900	400	-	2
L1000	433	-	2
L1100	533	-	2
L1200	567	-	2
L1400	900	-	2
L1600	1100	-	2
L1800	1100	-	2
L2000	1300	-	2
L2200	1700	567	2
L2400	1900	633	4
L2600	2100	700	4
L2800	2300	767	4
L3000	2500	1033	4

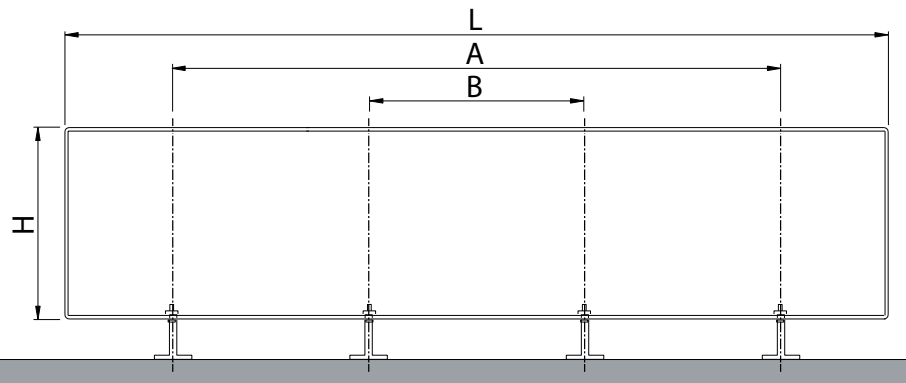


3. Placer radiatoren med forsiden nedad på en blød overflade for at undgå ridser på fronten

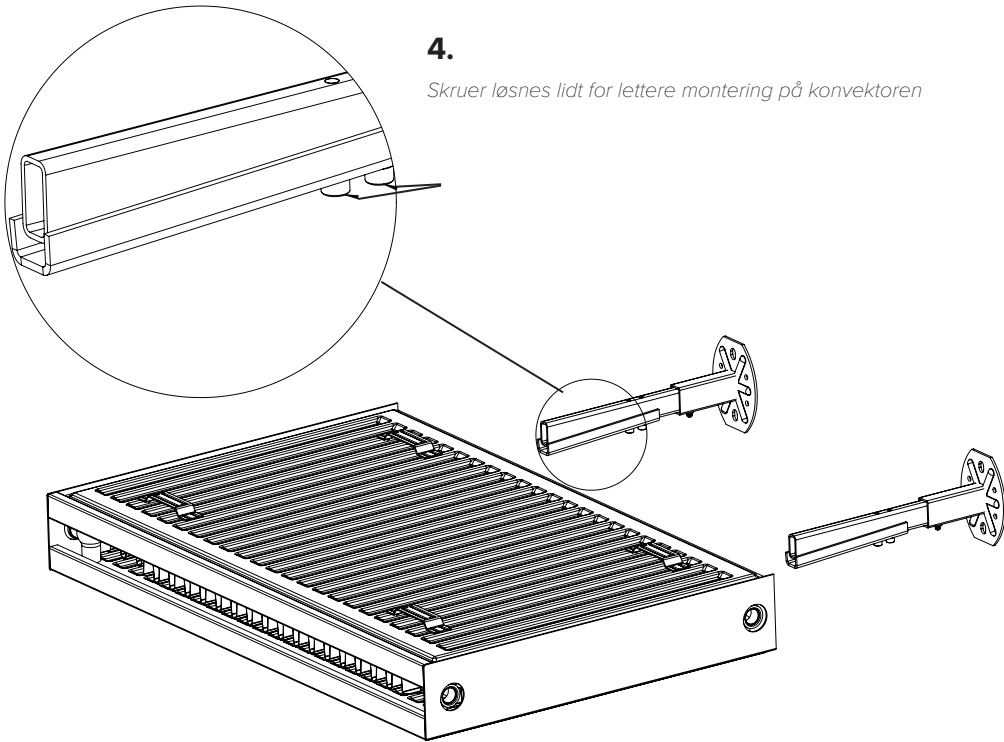


4.

Skruer løsnes lidt for lettere montering på konvektoren

5. Skub benene på plads i den valgte konvektorfinne og spænd skruerne

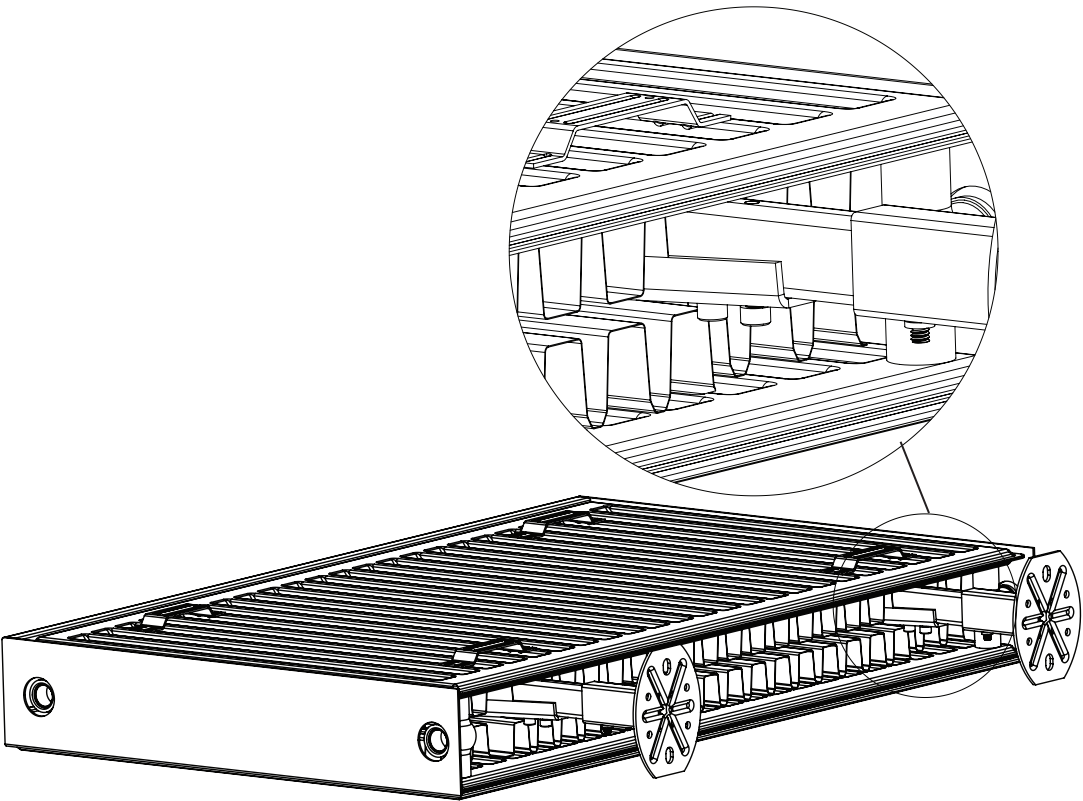

6. Placer radiatoren og markér hullerne i benene for boring

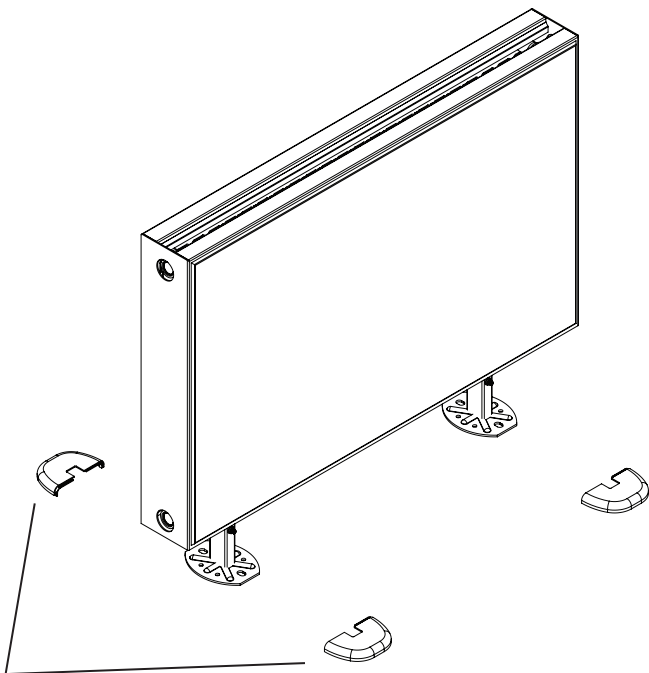

7. Monteres efter radiatoren er monteret i gulvet /

8. Skru til højdejustering /

